

Thank you for purchasing a Chum and Tote!

Here's what you need to know before getting started. We've assembled all we could before shipping, but you'll have to do a little also.

What do you need?

- A 15/16" and 7/8" wrench. Or an adjustable wrench. (For hinge pin and plunger pin)
- A #2 Phillips. (For spinner plate)

What's in the box?

- Feeder/Cargo Rack assembly w/ spinner motor (installed)



- Truck side hinge




- Hinge pin



- Plunger Pin



- Spinner plate

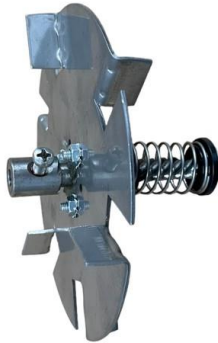

- Rubber gromet



After you have everything out of the packaging.

1. Place truck side hinge mechanism over the hopper side and slide hinge pin into place and thread on the 15/16" nut.




2. Apply provided lock tight to the threads of the plunger pin. Thread plunger pin into truck side hinge, making sure everything functions properly, tighten plunger pin and hinge pin.

3. Pass the quick connect motor wire for the spinner through the truck side hinge mechanism and insert supplied rubber grommet.



4. Fold hinge out of the way to install spinner plate. Slide spinner plate onto stem coming out of the motor. (Make sure the flat spot in the stem is facing the hole in the funnel) tighten the set screw with #2 Phillips.

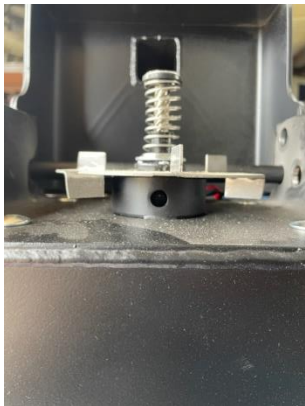

Put this baby in your hitch and happy hunting!

Again, thank you for your purchase, sincerely the team at Chum and Tote.